



PANEL ASSEMBLY FOR B400 BRACKET

B400 BRACKET

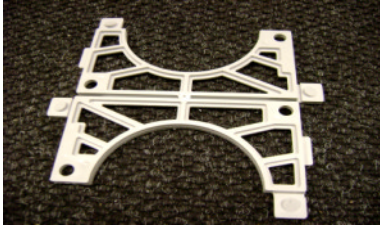

THE BRACKET HAS 6 1/4" CENTER TO CENTER SPACING AND IS READY FOR 4" TERMINATORS.

STEP 1

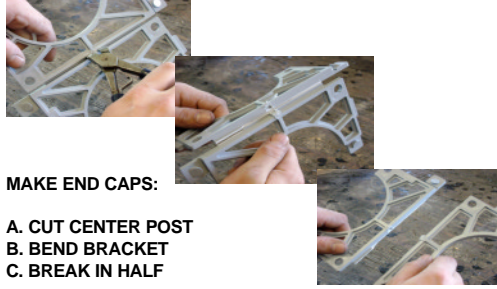

MAKE END CAPS:

- A. CUT CENTER POST
- B. BEND BRACKET
- C. BREAK IN HALF

THESE WILL BE USED ON THE ENDS OF THE PANEL STRIPS.

STEP 2



USING ONE FULL UNCUT B400 BRACKET AND ONE END CAP, SNAP THEM TOGETHER AROUND THE 4" TERMINATOR.

STEP 3



ADD ANOTHER B400 BRACKET AND ANOTHER 4" TERMINATOR TO MAKE A STRIP.

STEP 4



TO COMPLETE THE STRIP, ADD THE OTHER END CAP FROM THE CUT B400 BRACKET.

STEP 5



ASSEMBLE THE STRIPS BY LINING UP THE MALE AND FEMALE TABS, HOLD AT 45 DEGREES AND PRESS DOWN ON THE PANEL.

B400 ASSEMBLY OF PANEL (cont.)

STEP 6



HOLD PRESSURE ON THE TABS AND PRESS DOWN ON THE PANEL UNTIL YOU HEAR IT CLICK.


STEP 7




CHECK ALL TABS FOR A GOOD TIGHT FIT. PANEL IS READY FOR YOUR FORM.

THIS

OPTIONS

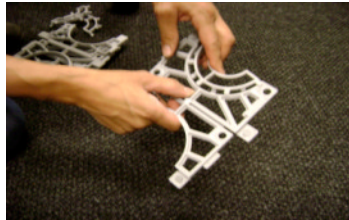

YOU CAN ADD 2" AND 3" TERMINATORS TO YOUR PANEL BY SNAPPING IN A B230 BRACKET.

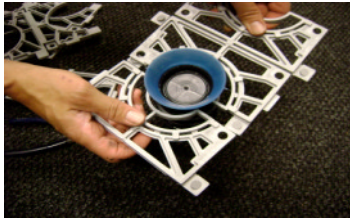

FOLLOW STEPS 1 THROUGH 7 ABOVE TO SNAP 2" AND 3" TERMINATORS TO YOUR PANELS.

IN

FOR MORE DETAILS TO USE THE B230 SEE THE B230 PANEL ASSEMBLY INSTRUCTIONS.